

FERRARI

488 PISTA & F8

TWIN INTERCOOLER SET

THIS INSTRUCTION GUIDE WILL HELP WITH THE INSTALLATION OF THE CSF #8210 TWIN INTERCOOLER SET ON YOUR FERRARI 488 PISTA / F8. PERFORM THESE STEPS ON BOTH SIDES OF YOUR FERRARI (MODEL & YEAR RANGE BELOW)

- 2019-2021 FERRARI 488 PISTA/PISTA SPIDER - OEM PN: 748562 (LEFT) | 748559 (RIGHT)
- 2020+ FERRARI F8 TRIBUTO/SPIDER - OEM PN: 748562 (LEFT) | 748559 (RIGHT)




ONE

UNBOLT BYPASS VALVE
RETAINING CLIP TO
CREATE SOME SLACK
FOR THE BYPASS HOSE.




TWO

REMOVE BYPASS HOSE CLIP
AND BOLT AND SAVE FOR
FUTURE STOCK CONVERSION
IF DESIRED.

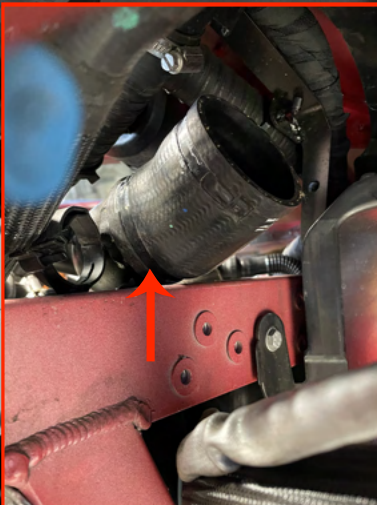

THREE

LOOSEN THE HOSE CLAMP
ON THE INTERCOOLER
CONNECTING HOSE.

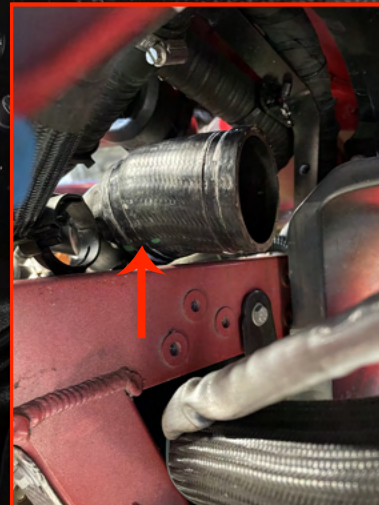

FOUR

CLOCK THE INTERCOOLER
CONNECTING HOSE 180
DEGREES AND TIGHTEN
THE HOSE CLAMP